









<p>1. Remove brushed motor.</p>	
<p>2. Solder black motor wire to Brushed2Less controller where shown.</p>	
<p>3. Attach speed controller as shown.</p>	
<p>4. Make and attach Y harness to battery, stock system and brushless speed controller.</p>	

A typical battery Y harness will look like the above image. Here is a simple diagram describing what needs to be done:

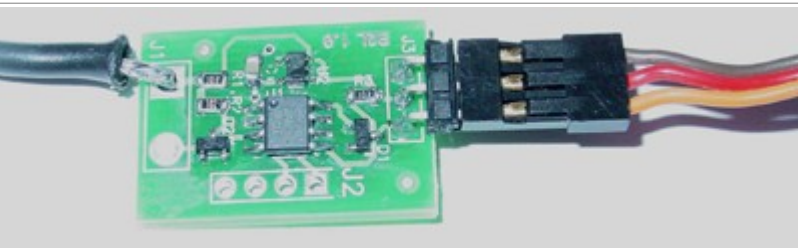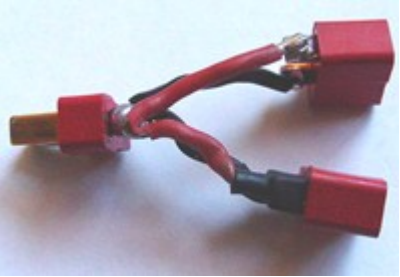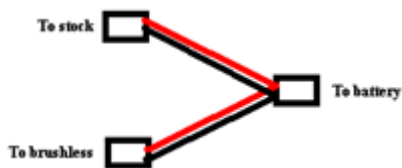

Your connectors may be different than the image in step 4 above, but the concept is the same as that in the diagram above.

Here is a diagram of the Brushed2Less controller:

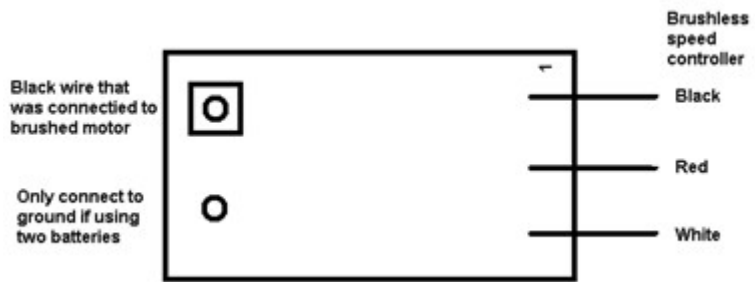

Use your browser BACK button to return to the previous page.